



Disassembling SKIL 4235 Jigsaw Base plate

To instruct the use in how to disassemble the base plate to allow further access to disassembling the device.

Written By: Adam Cardoso



INTRODUCTION


This guide is to remove the base plate. This will allow you to access the rest of your saw and disassemble it properly.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Base plate

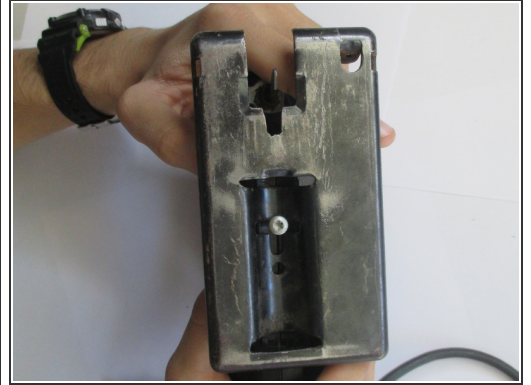

- Orient your saw so that the blade is pointing in the opposite direction of your body. Ensure that the screws circled are visible and pointing skyward. This will be the standard position of the Jigsaw for the duration of this guide.

Step 2



- Using two hands grip both side of the saw and lift 90 degree as demonstrated.

Step 3



- Identify the screw circled in red and remove with Phillips screwdriver.

Step 4



- Lift base plate up into the air and place off to side. Do not forget to place the removed screw in an area you will easily find it later.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 12:10:15 AM.